

X's –Drive II⁺

(VP2160)

Index

1. Ports Connection and Buttons
2. Using the X's –Drive II⁺
 - Charge Batteries
 - Power On / Off
3. Driver Installation
4. USB Connection
5. Format Hard Disk under Win 2K/ Win XP
6. Downloading or Editing the files on PC
6. Data Transfer from Memory Card
7. Auto Power off Function
8. Battery Recharge
9. If an erroneous display / operation occurs
10. Care for the Hard Drive and unit
11. Troubleshooting

FCC Certifications

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

CAUTION

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electronic shock.

IMPORTANT WARRANTY INFORMATION

- To reduce the risk of fire or shock hazard, do not expose this equipment to rain , any liquid or moisture.
- Vosonic shall have no obligation to repair ,replace or refund until the customer returns the defective product to Vosonic.
- The repairs and replacement service will not apply to PRODUCT units that were misused, repaired without authorization or by other reasons beyond the range of intended use.
- Any replacement product may be either new or like –new, provided that it has functionality at least equal to that of the product being replaced.
- Vosonic is not responsible for any data stored on returned products, please backup any data prior to shipping the unit.
- The limited warranty for accessories (included battery) is only valid for **6** months from the date of purchasing..
- All OUT OF WARRANTY repairs maybe subject to a normal repair fee.
Please contact your dealer or Vosonic for current charges.

Features:

- USB 2.0 High speed compatible
- A stand -alone ,Palm-sized rechargeable storage device. No PCs required.
- Support SmartMedia , SD/MMC , Memory Stick , Memory Stick Pro and Compact Flash Type I/II ,IBM MicroDrive , Mini-SD(with adapter) , RS-MMC (with adapter), MS Duo (with adapter),MS Pro Duo (with adapter)
- Infinite memory & storage expansion configuration with internal Hard Disk
- Able to copy the data from memory card(s) into the internal hard drive
- Fast & easy file transfer and storage with a simple button operating.
- Back up all kinds of files as the 2.5" external HDD , USB card reader/ writer.
- Convenient charged by a generic AC/DC adapter.



Package Checklist :

- Main unit
- USB cable
- Pouch
- Warranty Card
- English user's guide
- Setup CD-ROM
- Power Adapter (100-240V auto switched)

SPECIFICATION:

ITEM	DESCRIPTION
Support Memory Card Interfaces	SM, SD/MMC, MS ,MS Pro and CFTType I/II, MicroDrive, Mini-SD (with adapter) ,RS-MMC (with adapter), MS Duo (with adapter), MS Pro Duo (with adapter).
LCD	Amount of battery power File transfer status Main storage (HDD) capacity Memory card / HDD error indicator USB Access Charge Status
Hard Disk Size	2.5 inch
Hard Disk Capacity	Unlimited (Any 9.5mm 2.5" HDD)
Power Source	Internal Power: Li-ion rechargeable battery 3.7V x 1 (1100mA) Model Number: Fuji-NP60 External Power: 5V adapter (2.5A)
Download interface	USB 2.0 interface port
Files System	Support Standard FAT 12/16/32
System OS	• Windows98/98SE with driver • Win 2000 SP3 above without driver • Linux Kernel version 2.4 or above without driver • Mac OS 10.01 above without driver Note: VP2160 doesn't support Windows SP1 , SP2 , please upgrade to SP3 or above.
Accessories	Power Adapter / USB Cable / User's Guide / Driver Disc/Carrying Bag
Operating Temperature.	0° C ~70° C
Storage Temperature	-40° ~70° C
Humidity	90% RH
Weight	230gr (Included 2.5" HDD & battery pack)
Dimension (L*W*H)	116 x78x23mm

1. Ports Connection and Buttons

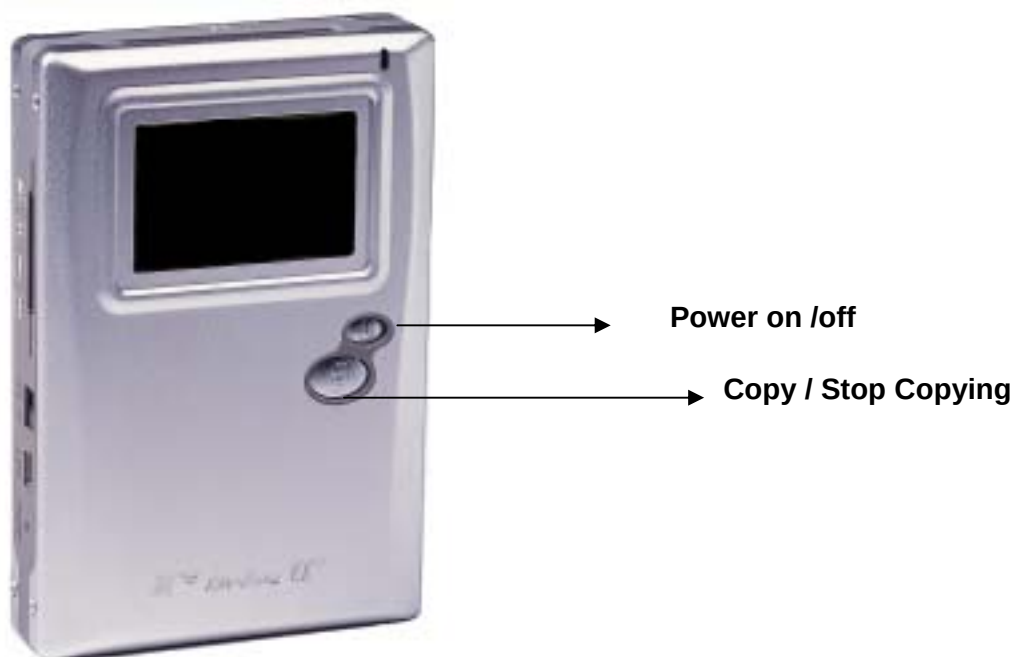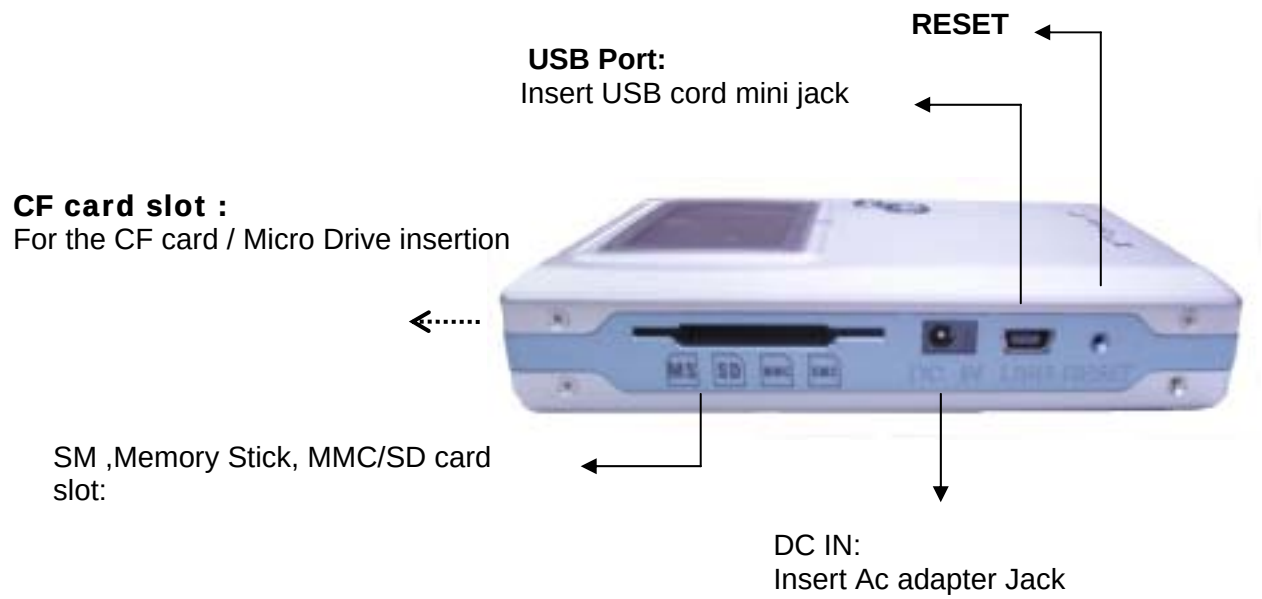

2. Using the X's-drive II⁺

1) Charge the batteries

- Before using for the first time, charge the batteries for a full 4 hours.

2) Power On /Off

- Long press the Power button for 2 seconds.
- The green light will go on and the operating system will boot up.
- To shut off the unit, press the power button.

3. Driver installation

Windows Me and Windows XP Home Edition and Professional Edition
,Win2000 Professional SP 3 above .

Windows Me and Windows XP HomeEdition and Professional Edition,
Win2000 Professional SP 3 above users do not need to install any drivers.
Windows will automatically detect your device as following figure



Windows 98 / 98 SE

1 Insert your driver Installation into your CD-ROM drive and double click on "My computer".

2 Browse your CD-ROM drive and run "**setup.exe**" to begin driver installation. Press "**Next**" and follow the installation instructions.

3 Restart your computer after installation is complete.

4 Under Windows 98, the 4 disk drives look like drives, G, H, I and J in the following figure.



Note: Please partition the Hard Disk first , then the Windows 98
Can recognize the Hard Disk .

Macintosh MacOS 9.x

1

Insert your driver Installation into your CD-ROM drive and double click on "My computer" Browse your CD-ROM drive to "**MacOS Installer**".

2

Follow the installation instructions to being installing drives.

3

Restart your computer after installation is complete.

4. USB CONNECTION:


When VP2160 begins connecting to the computer, the " **HD TRANSFER** " message will appear on the screen. During file transfer in the PC mode

DO NOT :

1. Plug out the USB cable
2. Remove memory card(s) from the card slot,
otherwise, there may be a chance of lost or corrupt data.
3. Keep the power supplier plugged if you are connecting to the laptop.

Note:

- a. When you connect to your laptop , please remember to keep the device plugged into the AC adapter or the secondary power source via USB cable
- b. To safely disconnect the VP2160 from computer, click on the system tray



remove icon

and wait until you get a message saying that you can safely unplug the device before disconnecting the USB cable.


5. Format Hard Disk under Win 2K/ Win XP

Due to **Win 2K/ Win XP can not support Format Disk for 30G above Hard Drive**. Please find the Application Program on the included CD-ROM. This program is a " FDisk AP" for Format Application Program . It has a simple interface which you can use it to format the Hard Disk .

Note : If you are using the new Hard Disk, please remember to Initialize the HDD first .

Learn more about your partitioning and formatting options , please link to <http://support.microsoft.com>

- Use the power adapter to avoid the device shuts off due to low power .
- Connect the device and PC with the provided USB cable
- Find the Application Program on the included CD-ROM.
- Follow then instructions to being formatting drives.

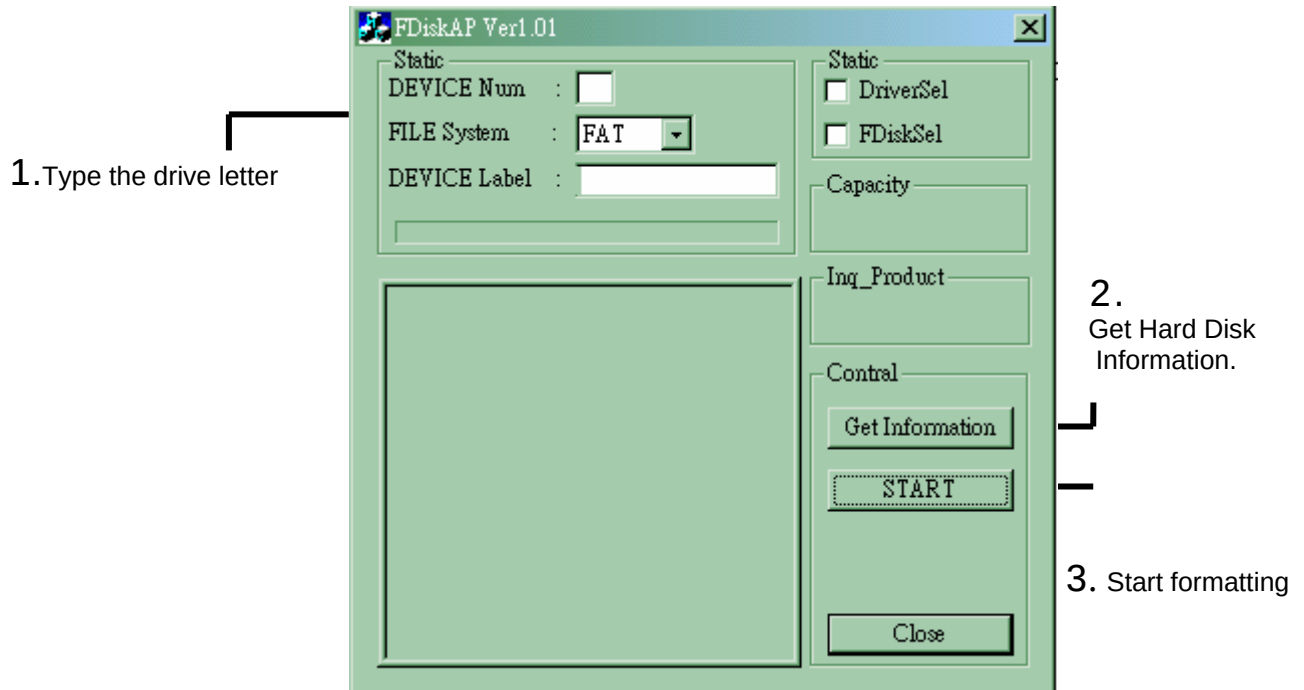


6 .Downloading or Editing the files on PC:

- Power on the VP2160
- Connect the VP2160 and PC with the provided USB cable
- Double Click the " My computer" icon , the operating system will display 4 icons identifying the media types correspondingly.
- You can then read ,write,copy ,delete and remove data on the PC.

7. Data Transfer from Memory Card

- Insert memory card(s) into the *card slot* .

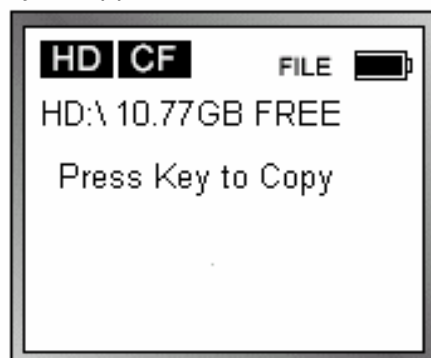

- Press the " COPY" button , files transfer function can be performed.



- If the message [COPY OK] pop on the screen , it indicates the files are successfully copied And the HDD free memory will be displayed.



- All files transfered from each memory card are stored onto the Hard Disk in folders numerically, under the name " CF0001 " , " MS0001" , "SM0001" , "SD0001".
- When the same card was inserted and copied twice, two different folders were created, VP2160 won't overwrite the folder.
- To stop the data transfer , just depress the Copy button and , the message [COPY STOP] will pop on the screen , then you can switch off the device .

8. Auto Power off Function

- 1) There is an auto screen- off function to save battery power .Thus if it is idle for 80 seconds ,It will shut off .

9. Battery Recharge:

- 1) To charge the batteries, please connect the plug of the AC adapter to DC 5V jack of the main unit. When the Power LED indicator goes off, it indicates that the batteries are fully charged.
- 2) Please use only the **FUJIFILM NP-60 1100mA** 3.7V rechargeable Li-ion battery.
- 3) For additional battery packs, please contact your dealer or you can purchase it at Digital Camera Stores.

10 If an erroneous display /operation occurs :

- 1) When the device error message pop on screen , there may be a chance of corrupt data or the memory card is damaged , you can change another memory card .
- 2) If any shut down caused by erroneous operation , you can depress the [reset] button located on the left to switch off the main unit .
- 3) If the unit operated via USB on to PC while the batteries are low, erroneous display /operation may occur, if this happens ,unplug the USB cable, and press the [reset] button .

11. Care for the Hard Drive and unit :

- 1) If the computer or VP2160 can not detect the Hard Drive, check the suggested solutions:
 - Check the flat connector is plugged securely or not
 - Driver is not install -then reinstall
 - It is not recommended to format the 32G above Hard Disk under Windows 2000 or Windows XP

Note: Win 2K/ Win XP can not support Format Disk for 30G above Hard Drive.

- 2) Please don't use force when connecting the flat cable with the unit and Hard Drive .
- 3) To keep your hard drive in better operating performance, we recommend to periodically run Scan Disk and Disk Defragmenter .
- 4) Hard Drive must be formatted to the FAT or FAT-32 format, NTFS format is not compatible with this function .
- 5) Please carefully insert and remove the memory card from each slot .

- 6) Do not drop, jar , bump , shock the unit , or expose to severe vibration while data is being transmitted .
- 7) To reduce the risk of electronic shock , do not remove cover (or back)
- 8) To reduce the risk of fire or shock hazard, do not expose this equipment to rain , any liquid or moisture.

12. Troubleshooting.


WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electronic shock. If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult Your dealer or service center.


Problem	USB Connection issues
Solutions	Under Windows 98SE, the VP2160 should not be connected to the system before the driver has been installed.
	If using a USB port in the front of your computer, try a USB port in the back. Front USB ports are often from non-powered.
	If using a laptop computer and a docking station, try connecting without the docking station.
	If you cannot see the files on the device after copied files to VP2160 via USB from computer, You must properly remove (un-mount) your VP2160 from the computer before disconnecting the USB cable to avoid loss of data or freezing the computer and VP2160.
Problem	Macintosh™ OS issues
Solutions	MacOS 10.0.x does not adequately support FAT volumes. Upgrading to 10.1 or later is mandatory
	The FAT-32 format made by MacOS X's Disk Utility is incorrect. Formatting must be done under MacOS 9.
	The FAT volumes do not appear or disappear until after the mouse is being moved.
Problem	Corrupt data , General Error
Solutions	Due to file allocation table (FAT) has been corrupted, the data in memory card transferred into VP2160 may be looks faulty, please backup the data and run ScanDisk , Disk Defragmenter or reformat the memory card.
Problems	Formatting, and partitioning
Solutions	To work in the stand-alone mode, both the disk and the memory cards must be formatted to the FAT or FAT-32 file systems. Note: Win 2K/ Win XP can not support Format Disk for 32G above Hard Drive.
	To have the 32G above Hard Disk work on the Win 2K/Win XP, you can use the FDisk Application Program to format the HDD.

Hard Disk Assembly Chart

1. Remove the screws1~4.

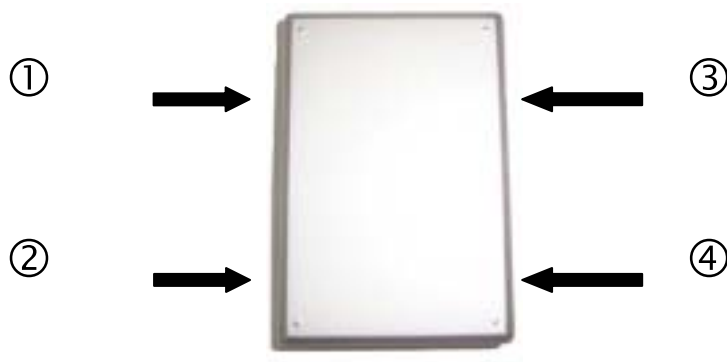

2. To avoid bending the pins, carefully slide the HDD into the chassis,

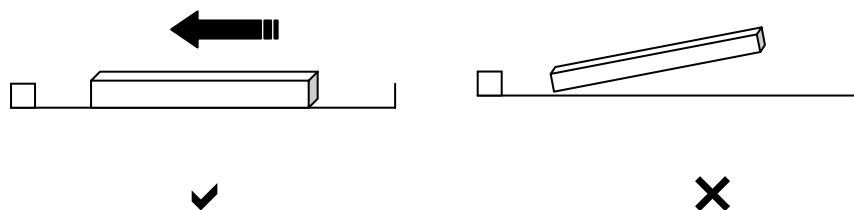

3. Inside the accessories pack , you will see the spongy rubbers , stick the spongy rubbers underneath the back case to secure the assembly .




Battery Installation Chart

2. Remove the screws1~4.



2. To avoid bending the pins, carefully slide the battery into the chassis.

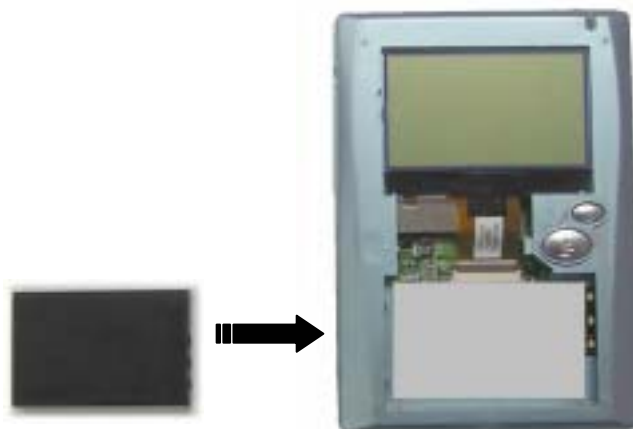

**Thank you for choosing this product.
If you experience problems
with the VP2160
And cannot find answer in the previous
troubleshooting sections ,
please contact your dealer.
or check the updated firmware at
www.vosonic.com.tw
or mail to
service@vosonic.com.tw**